

## How to Adjust Locking Pin on the Convertible Elite Door Panel

If the Door fails to lock properly, the Locking Pin may need to be adjusted.

Please follow the steps below to adjust the Screw located underneath the Locking Pin as shown in Figure 2.



**Figure 1.**  
Locking Pin shown above  
does not lock properly.



**Figure 2.**  
The adjusting Screw is located  
underneath the Locking Pin as  
shown above.



**Figure 3.**  
Using a phillips screwdriver,  
loosen the Screw as shown in  
Figure 3. but do not remove  
it completely.



**Figure 4.**  
Screw loosened correctly.



**Figure 5.**  
Determine which direction the Screw  
needs to be adjusted by sliding it  
using a phillips screwdriver. This will  
cause the Locking Pin to adjust itself  
to lock properly when the Door is closed.



**Figure 6.**  
Tighten the Screw securely in place.  
The Door should now lock properly.